


GREASEMAX[®]

Installation Instructions

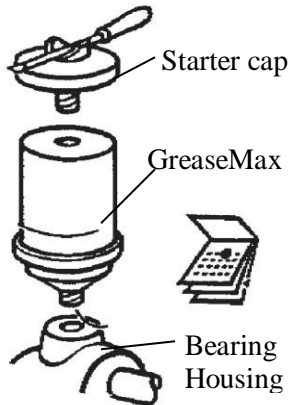

1. **Screw in the starter cap by hand**
(You will hear the seals break while doing this)
The starter cap must be tightened firmly
-Use a screw driver or similar to assist in tightening
2. **Record change over date**
3. **Pre-grease bearing before first installation**
4. **Install GREASEMAX hand tight into grease point**

DO NOT OPEN **GREASEMAX**

DO NOT REMOVE **GREASEMAX** until the change over date

- If **GREASEMAX** is to be installed with extension lines, use minimum 8mm diameter tubing, pre-fill all lines. The maximum recommended length is 2 metres.
- Do not screw the starter cap into **GREASEMAX** until ready.
- Wear protective gloves when activating **GREASEMAX**.
- Dispose of used **GREASEMAX** in the industrial waste bin.

<u>Color Code</u>	<u>Rated Operating Interval</u>	<u>Min. starting time before lubricant discharge</u>
White	1 month unit	8 hours
Blue	3 months unit	24 hours
Red	6 months unit	30 hours
Grey	12 months unit	40 hours

⇒ **Note: color of starter cap must match colour of activator in base of **GREASEMAX****

WARNING: GREASE MAX uses a small quantity of potassium hydroxide as part of its operation. If **GREASEMAX** is opened or accidentally damaged and the liquid escapes onto the skin or eyes, wash with water immediately and seek medical advice. Refer to material safety data sheet for more details.

TECSIA ENGINEERING PTE LTD

Reg No: (UEN) 201216786R

2A Mandai Estate, #01-01 BHL Factories, Singapore 729928

Tel: (65) 6456 1133 Fax: (65) 6459 0093

Email: sales@tecsiaengr.com Website: www.tecsiaengr.com